


Wall Mount Cell Phone Locker

8 door, poly housing

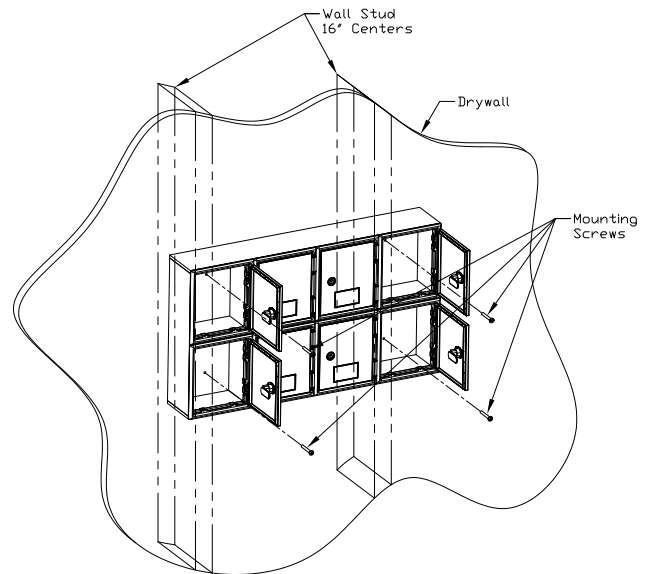

General Installation

For installation on walls with wood studs:

Mounting hardware included are for fastening Cell Phone Locker directly to wood stud walls, with max depth 5/8" drywall.

1. Mark wood stud location on wall surface.
2. Hold cabinet at installation location and level.
3. Mark hole locations (4 total), on wall.
4. Confirm hole locations are over wood studs.
5. Secure cell phone locker to wall using supplied screws, through holes on back panel.
6. Tighten screws by hand. *Over tightening may causes screws to strip out of wall stud, and cell phone locker to fall.*

For installation on all other wall types:

Identify wall composition, and obtain fasteners that correspond. Fasteners and Cell phone locker can be secured through the back panel, using the holes provided. Installer must choose installation location, fasteners and method to account for securely mounting cell phone locker and weight of added contents.